




SPRINGS CELLULAR

WINDOW FASHIONS

Congratulations on the purchase of your Cellular window fashions by Springs. Your Cellular shade is a state-of-the-art window treatment and you will find it a snap to install. Take the time to look through these instructions before proceeding.

INSTALLATION INSTRUCTIONS

PARTS LIST

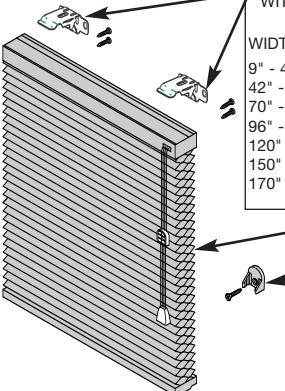

MOUNTING BRACKETS WITH SCREWS


WIDTH	No. of BRACKETS
9" - 42"	2 BRACKETS
42" - 70"	3 BRACKETS
70" - 96"	4 BRACKETS
96" - 120"	5 BRACKETS
120" - 150"	6 BRACKETS
150" - 170"	7 BRACKETS
170" - 192"	8 BRACKETS

SHADE

TASSEL CLIP

**EXTENSION BRACKET (OPTIONAL)
Must Be Ordered Separately**


All extension brackets must be extended to the same length.

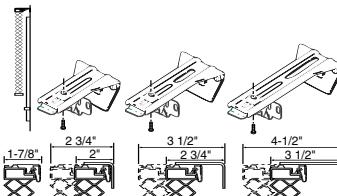

Normal Short Extension Medium Extension Long Extension

NOTE: If your extension brackets stick out beyond the front of the shade, they can be cut shorted with a hack saw. After your shade is mounted, mark the bracket flush with the front of the shade. Remove shade and brackets from window. Clamp the brackets in a vice and carefully saw off at mark with a hack saw.

TOOLS

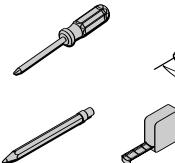

SCREWS
Slotted pan head screws provided in this set.
For wood, sheet metal, or for use with anchor inserts on right.



ANCHORS
Plastic or lead anchor insert.
Plastic anchor insert for lightweight draperies only, in wallboard, paneling, etc.




HOLLOW WALL ANCHORS
Hollow wall anchor. For ceilings and heavy draperies.
Hollow wall toggle bolt. For ceilings and heavy draperies.

MOUNTING BRACKETS

HELPFUL TIPS

Brackets must be in line and level to install shade; careful location of brackets will minimize need to adjust brackets.

A level can be used to accurately level the brackets.

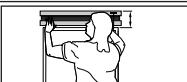


Hold shade up to window exactly as you will want it. Make sure it is level. For outside mount, be sure to leave "Room for Closed Shade Height" above your window.




OUTSIDE
3"

Put about a 2" long pencil mark on the wall about 3" in from each end of the shade. For outside or wall mount, use the top rear edge of the shade for a guide. For inside or ceiling mount, use the top front edge of the shade for a guide. On shades wider than 42", make a mark for each bracket with about equal space between the marks.

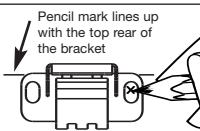


Pencil mark lines up with the top rear of the bracket

OUTSIDE

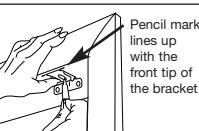

Pencil mark lines up with the front tip of the bracket

INSIDE

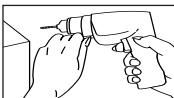

Drill holes on these marks. Drill size depends on which type fastener you chose from the "Fastener Guide".




Place brackets over holes and drive screws into holes until they are tight. Do not over tighten. Slots in brackets allow for some adjustment.


Put your shade down. Hold a bracket up to each pencil mark as shown here and mark where the center of the mounting holes are.

HANGING YOUR SHADE

Lock the shade in the "fully raised" position (see OPERATING YOUR SHADE).

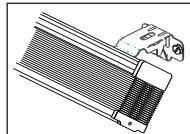


Hook the front of the headrail onto the front of the brackets.

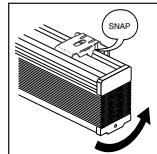


Rotate the shade back to snap in place.

OPERATING YOUR SHADE

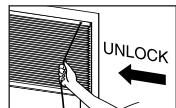


To lower shade, pull the cord down and towards the center of the shade to unlock the cord, then slowly release the cord until the shade is how you want it. Move the cord past the side of the shade and let go to lock the cord.

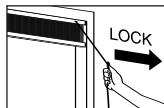


To raise the shade, pull the cord straight down until the shade is how you want it. Move the cord past the side of the shade and let go to lock the cord.

LENGTH ADJUSTMENT

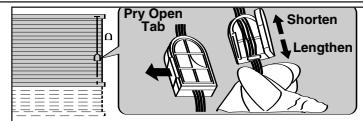


Pry out tab on the stop tassel with your thumb nail. Lower the shade to the length you want. Make sure it is level. Slide the stop tassel to the top of the cords. Make sure the cords are not twisted and squeeze the stop tassel closed.

HOLD DOWN BRACKET (OPTIONAL) MUST BE ORDERED SEPARATELY

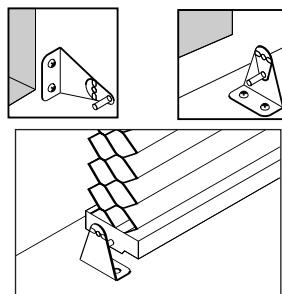


Hold down brackets are used to keep the bottom of the shade from swaying when it's closed. Lower the shade and mount the hold down brackets so the pin lines up with the holes on the shade bottom.

REMOVING YOUR SHADE

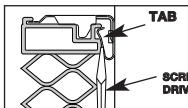

On each bracket there is a tab on the lower back side. Starting at one end of the shade, slide a standard flat screwdriver between the back of the rail and the tab. Push the screwdriver up and twist while rotating the bottom of the shade towards you. Keep releasing brackets until the shade is free.

TASSEL CLIP

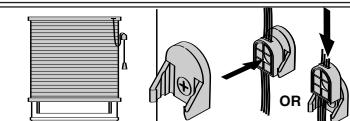


To keep the cords out of reach of children, mount the tassel clip on the window frame or wall next to the shade. The stop tassel snaps or slides into the clip.

CLEANING INSTRUCTIONS

Remove the shade and lay the opened shade on a clean, flat surface, such as a table or countertop. If shade is dusty, vacuum over it using an upholstery attachment. For cleaning fingerprints or soiled spots, use an aerosol spray foam upholstery or fabric cleaner, such as Woolite® or ScotchGard®. You can also use a mild dish detergent mixed into warm water. Do not use strong detergents or spot removers. Spray the foam cleaner over the entire area to be cleaned. Immediately wipe the area with a clean damp sponge (back and forth, gently in the direction parallel to the pleats in the fabric) until the stains are removed. If necessary, the entire shade may be cleaned in this fashion. Remove the excess water from the fabric with a clean dry towel. Hang shade partially open to dry. Avoid frequent cleaning as it tends to remove the fullness and body of the pleated fabric.

SAFETY

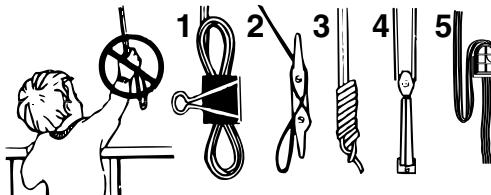

WARNING

To avoid possible strangulation, keep cords out of the reach of children. Use these devices:

- 1. Clamp or clothes pin
- 2. Cleat
- 3. Tie the cord to itself
- 4. Tie-down device
- 5. Tassel clip

LIFETIME GUARANTEE & LIMITED WARRANTY

This warranty is provided to you by Springs Window Fashions Division, Inc. This warranty applies only to Springs products that meet the following conditions:

- (1) You are the original retail purchaser of the product;
- (2) The product was purchased after September 1, 1992
- (3) The product was properly installed in a residential dwelling, and;
- (4) The product was made or assembled exclusively from Springs Window Fashions' materials and components.

WARRANTY: Springs Window Fashions warrants the product against original defects in materials or workmanship for as long as you own the product. Our sole obligation under the warranty is to repair or replace defective products or components without charge. Springs Window Fashions is not responsible for transportation costs to or from the retailer or costs for measuring and installing the products. If repairs are made under this warranty, the repairs will be made with like or similar parts. Conditions or damages caused by accidents, alterations, misuse, or failure to follow instructions for measurement, installation, cleaning or maintenance are excluded from the warranty. In addition, normal wear and tear are not covered by the warranty.

SERVICE: If you believe a product is defective, you may return the product with your original sales receipt to the retail store at which you purchased the product. This store will arrange for inspection of the product and repair or replacement, if warranted, by a licensed fabricator or Springs Window Fashions. If you need further assistance regarding this warranty, you may write or call Springs Window Fashions at the address or telephone number provided below.

SPRINGS WINDOW FASHIONS DIVISION, INC.,

7549 Graber Road, Middleton, Wisconsin 53562-1096

Phone: (800) 356-9102

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ALL OTHER WRITTEN OR ORAL WARRANTIES OR OBLIGATIONS AND LIABILITIES. No person is authorized to extend or alter this warranty. SPRINGS WINDOW FASHIONS SHALL HAVE NO LIABILITY WHATSOEVER FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.



Springs Window Fashions Inc.

Form No. 5536 x 50 (1/94)

7549 Graber Rd., Middleton, WI 53562-1096